


Cable Wall Mounting Instructions

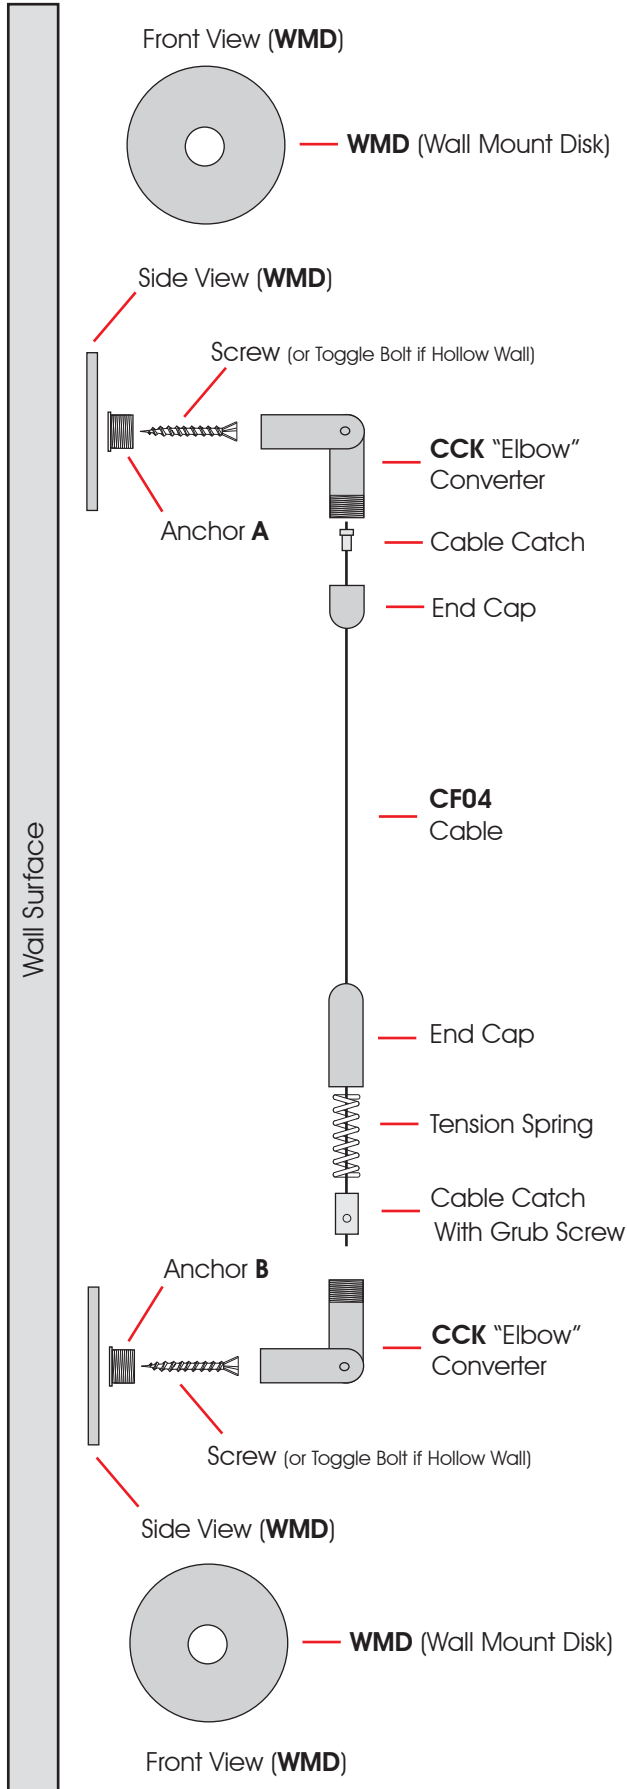

(1) Determine Your Wall Display Position.
(See Display Installation Instructions)

(2) Mark the Height That's Needed for your Display on the Top.
(See Display Installation Instructions)

(3) Measure & Mark Cable Mounting Positions on Wall.
(Template Provided)

(4) Determine the Type of Fastener to be Used. Wood, Metal or Toggles.
(All Provided)

(5) Make Holes in Wall for Toggle Applications. (See Instructions)

(6) Mount Cable Anchors (A and B) to the Top & Bottom with WMD Wall Plate Placed Under the Cable Anchor.

(7) Double Check Distance Left to Right & Up & Down to Make Sure Everything is Level and Lined Up.

(8) Screw CCK Elbow's onto Each Anchor Position.

(9) Screw CF04 Cables onto Your Top CCK Elbows.

(10) Unloosen Cable Catch on Bottom of the CF04 Cables.

(11) Slide Assembly Up & Pull Down CF04 Cable so that it Lines Up with the Top of the CCK Elbow Threads & Cut 1/8" Above the Threads.

(12) Re-tighten CF04 Cable Catch & Screw Assembly onto CCK elbow.

Repeat these steps with all cables.

ACRYLIC Display Cable Placement Distances

9-7/8" Apart for 8-1/2" x 11" Portrait Acrylics.

12-13/16" Apart for 11" x 8-1/2" Landscape Acrylics.

12-13/16" Apart for 11" x 17" Portrait Acrylics.

18-5/16" Apart for 17" x 11" Landscape Acrylics.

LED Display Cable Placement Distances

10-1/4" Apart for 8-1/2" x 11" Portrait LED's.

12-3/4" Apart for 11" x 8-1/2" Landscape LED's.

12-3/4" Apart for 11" x 17" Portrait LED's.

18-3/4" Apart for 17" x 11" Landscape LED's.