


Cable Mounting Instructions

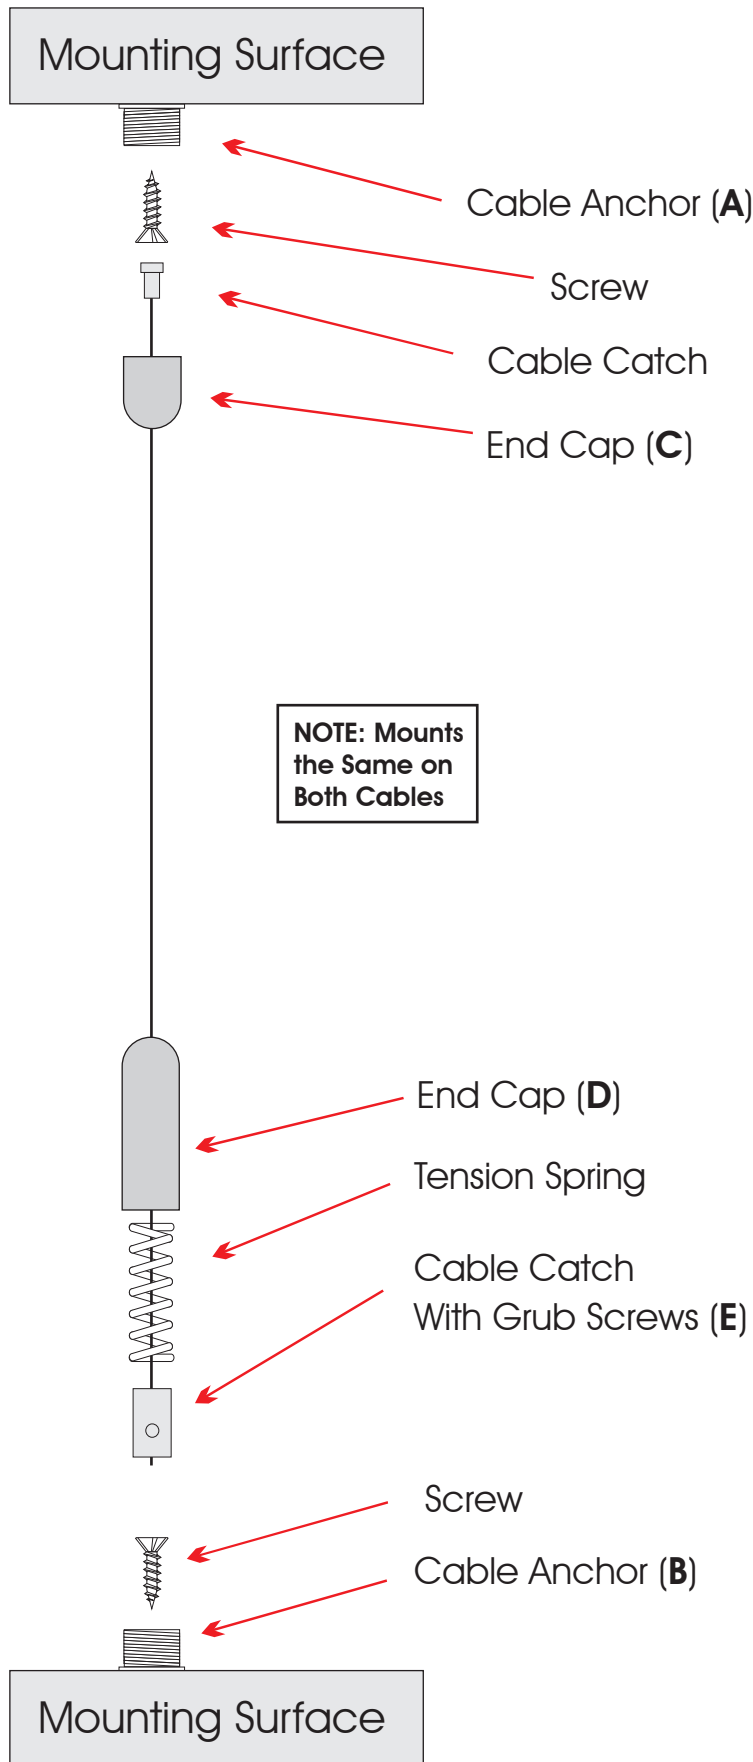

- 1) Mount Cable Anchors (**A** and **B**) to the Bottom & Top of the Window Frame directly Above and Below Each Other .
(Use a wood or Metal Mounting Screw Depending on your mounting surface)
- 2) Screw End Cap (**C**) into Cable Anchor (**A**) and let the cable hang loose.
- 3) Loosen 2 Grub Screws On Cable Catch (**E**) and Slide the whole assembly up the cable.
- 4) Cut The cable 1/8" above the Bottom Cable Anchor (**B**).
- 5) Tighten the Grub Screws on the Cable Catch (**E**).
(NOTE: The whole bottom cable assembly should be hanging loose and just bumping the top of the Cable Anchor.)
- 6) Screw End Cap (**D**) into Cable Anchor (**B**)
- 7) Repeat Steps 1 through 6 for all cables

ACRYLIC Display Cable Placement Distances

9-7/8" Apart for 8-1/2" x 11" Portrait Acrylics.

12-13/16" Apart for 11" x 8-1/2" Landscape Acrylics.

12-13/16" Apart for 11" x 17" Portrait Acrylics.

18-5/16" Apart for 17" x 11" Landscape Acrylics.

LED Display Cable Placement Distances

10-1/4" Apart for 8-1/2" x 11" Portrait LED's.

12-3/4" Apart for 11" x 8-1/2" Landscape LED's.

12-3/4" Apart for 11" x 17" Portrait LED's.

18-3/4" Apart for 17" x 11" Landscape LED's.